


# INSTALLATION GUIDE

## Hexa Mini Wallpack

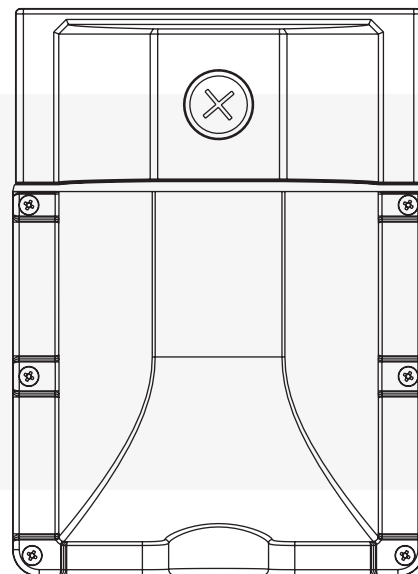

### IMPORTANT:

1. The Luminaire Must Be Installed by Qualified This Product Must Be Installed in Accordance With the Applicable Installation Code by a Person Familiar With the Construction and Operation of the Product and the Hazards Involved.

### RISK OF ELECTRIC SHOCK & PERSONAL INJURY:

1. Disconnect power at fuse or circuit breaker before installing or servicing.
2. Fixture may become damaged and/or unstable if not installed properly. Tighten all fixture components to their recommended torque values.

### WARNING:

1. Make certain power is OFF before starting installation or attempting any maintenance.
2. This control circuit is not isolated – see installation instructions.
3. Product IP rating is void if proper IP is not maintained from input wiring side of the luminaire.

### INSTALLATION:

#### Unpacking

This luminaires has been properly packed, should be no part damaged during The transit. Inspect after open the package to confirm any thing missing or damaged.

#### Handling

Damage may occur if luminaires is improperly handled outside of pack. Do not impact or stack luminaires after removal from packaging.

#### Dusk-to-dawn Operation (Optional)


Sensor automatically turns the light on at dusk and off at dawn. Ensure the sensor is unobstructed.

\*Pictures and diagrams in this IM are for illustrative purpose only.

# INSTALLATION GUIDELINE


## HEXA MINI WALLPACK INSTALLATION GUIDELINE

1. Remove the driver cover by opening the four screws (figure 1).
2. Choose the desired luminaire CCT and wattage through the selectable switch and close the driver box appropriately (figure 2).
3. Dismantle the luminaire reflector by opening the four screws. Remove the luminaire diffuser by opening the six screws from the front (figure 3).
4. Knockout the appropriate holes for making electrical connections and fixing the mounting screws. Apply the PU foam at the back side of luminaire and make electrical connections (figure 4).
5. Properly mount the luminaire by fixing it through appropriate screws. Put the front gasket properly and fix the luminaire diffuser through screws. Maintain the torque at 4-5 N-m (figure 5).
6. Apply exterior caulking from all sides of luminaire (figure 6).

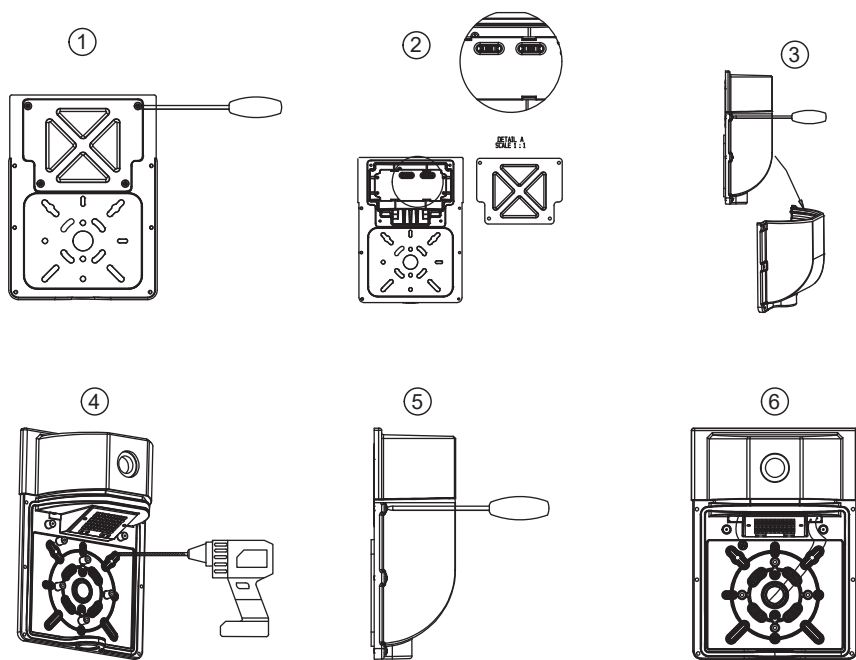


## CONNECTION DIAGRAM

### 1. Luminaire With Sensor

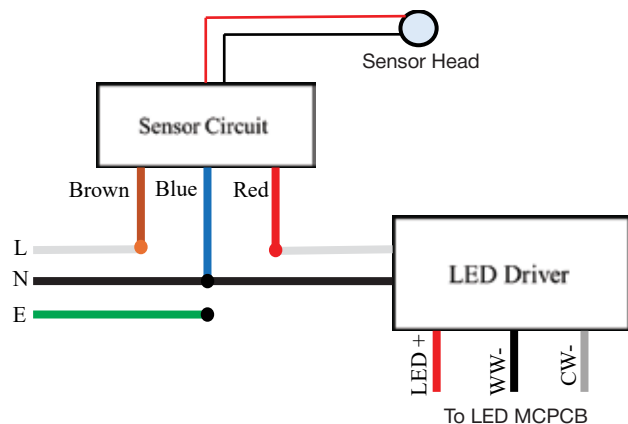

### 2. Luminaire Without Sensor

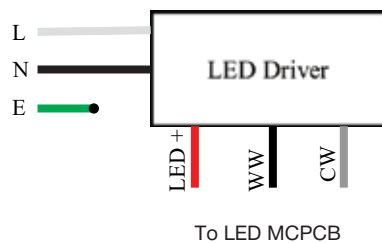

\*Pictures and diagrams in this IM are for illustrative purpose only.