

INSTALLATION GUIDE

LED

Semi-Cutoff Wall Pack



APPLICATIONS:

Tunnel (except for motor vehicle tunnel), workshop, warehouse, factory, house, building exterior, etc.


CAUTIONS:

1. Do not use an electric generator to test the LED fixture.
2. Please abide by related country, regional and local law and regulations when installing this fixture.
3. Do not install the fixture when it is raining to avoid electrical shock or damage.


NOTES:

1. To avoid possibility of electrical shock or fire, the installation personnel must have professional electric knowledge.
2. Please wear gloves to avoid injury before installation.
3. If at some point during or after installation you should notice smoke or fire coming from the fixture, turn the power off immediately and notify an electrician.
4. This fixture is only for outdoor usage. The recommended minimum distance from the fixture to ground is 2 meters.


NOTES:

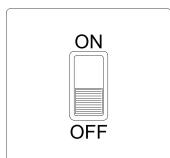


1. Turn power off.

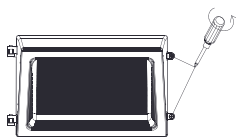

 2. Use a screwdriver to remove the screws on both sides.




3. Open the fixture, disconnect the connection terminals, and remove the upper cover from the fixture

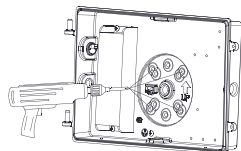


4. Drill through the mounting hole with an electric drill.

*Pictures and diagrams in this IM are for illustrative purpose only.


HL-WP-MW-MCCT-120W-PS-Gen2
 HL-WP-MW-MCCT-120W-PS-BB-Gen2
 HL-WP-MW-MCCT-120W-PS-HV-Gen2

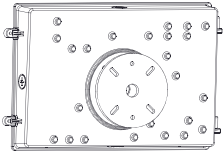


5. Attach EVA cotton pad to bottom shell.

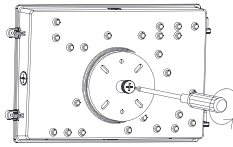


6.1.1 Use a screwdriver to remove the plug

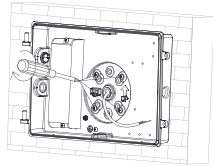


6.1.2 Lock the bottom shell on the mounting seat with screws.

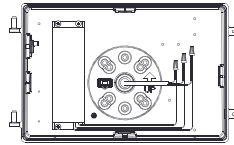


6.1.3 L, N and G wires connected to the power supply.

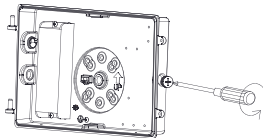


6.2.1 Use a screwdriver to remove the plug

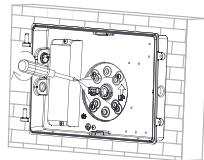


6.2.2 Lock the bottom shell on the mounting seat with screws.

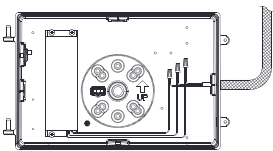


6.2.3 L, N and G wires connected to the power supply.

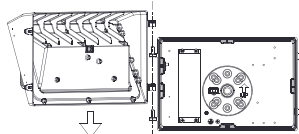

7. Install the cover of the fixture and connect the terminals.

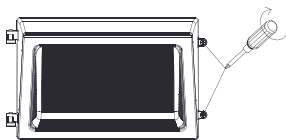

8. Install the cover of the fixture and connect the terminals.

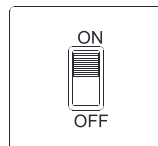

9. Make sure the installation is complete before turning power back on.


STANDARD WIRE:

L/live wire: Black\Brown; N/null wire: White\Blue; Ground wire: Green Yellow-green.

Warning: During grounding, make sure the earth wire of the driver and fixture housing are connected together with the earth wire of the local power supply.

*Pictures and diagrams in this IM are for illustrative purpose only.


SPECIAL FUNCTIONS INSTRUCTION:

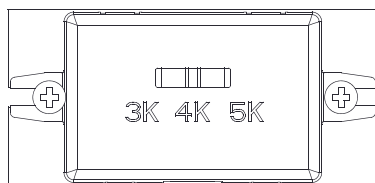

COLOR TEMPERATURE ADJUSTABLE INSTRUCTION:

1. The color temperature of the lamp turns to 3000K when the DIP switch is set to 3K.
2. The color temperature of the lamp turns to 4000K when the DIP switch is set to 4K.
3. The color temperature of the lamp turns to 5000K when the DIP switch is set to 5K.

NOTE: PLEASE TURN OFF THE POWER BEFORE ADJUSTING THE COLOR TEMPERATURE.

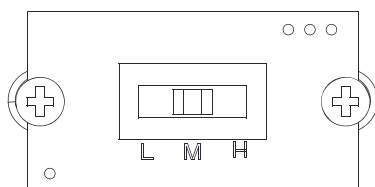

WATTAGE ADJUSTABLE INSTRUCTION

1. The power of the lamp will change to the corresponding wattage when the DIP switch is set to L/M/H.
2. Adjustable wattage range: 25%-100%.

NOTE: PLEASE TURN OFF THE POWER BEFORE ADJUSTING THE WATTAGE.

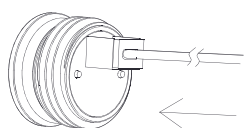


Fig:1

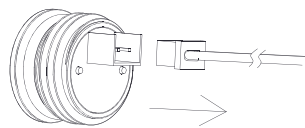


Fig:2

PHOTOCELL:

1. Connection of male and female connectors will help to turn on the photocell. (Fig:1)
2. Disconnection of male and female connectors will help to turn off the photocell. (Fig:2)

*Pictures and diagrams in this IM are for illustrative purpose only.