
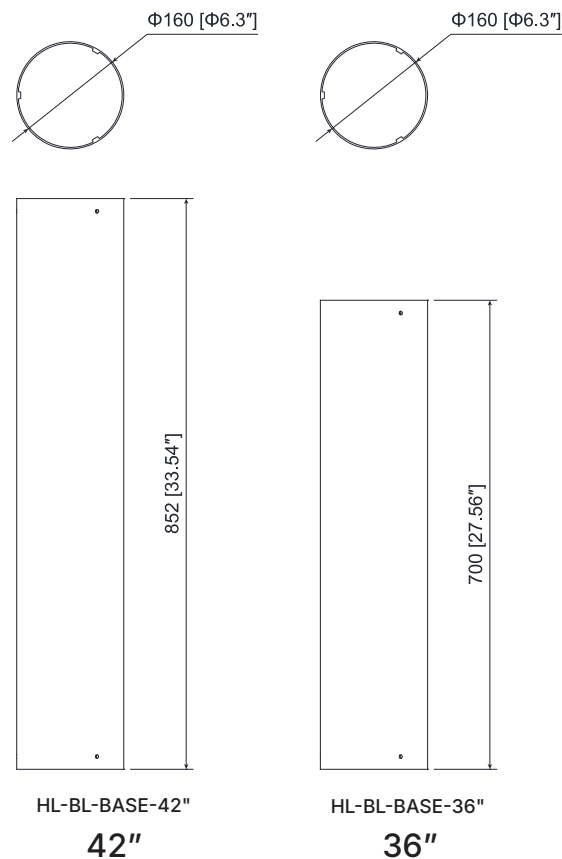



INTERCHANGEABLE BOLLARD BASES

Installation Guide


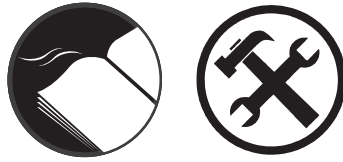


Installation Instructions

Check the accessories needed for the installation of the bollard housing

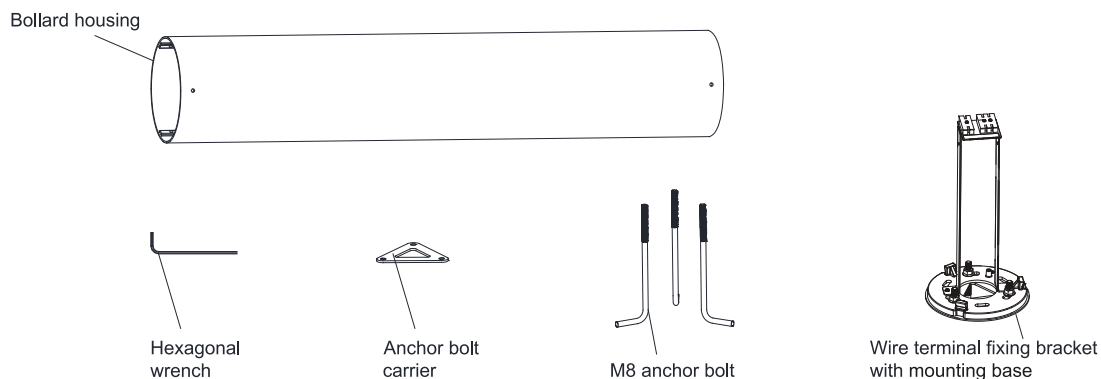


Installation Instructions

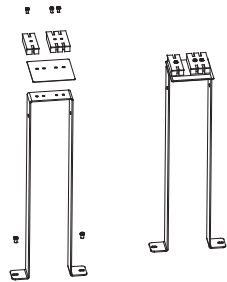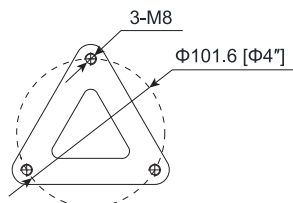

Terminal Fixing Bracket Installation:

Secure the Mylar film and the terminal fixing bracket to the terminal fixing bracket with screws.

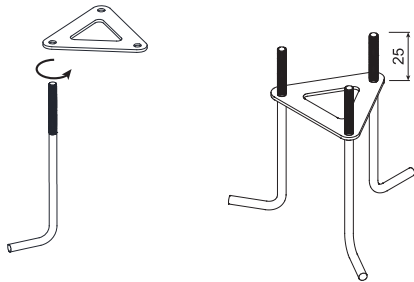



Installation for the anchor bolt carrier:

Get the anchor bolt carrier assembled as shown in the figure, make sure three anchor bolts to have at most 25mm protruding from the carrier. The three anchor bolt can exceed 25mm, if the retrofit plate is not required.


The anchor bolt threads must be completely free of any debris or contamination.

2

Embed anchor bolt carrier Install three anchor bolts into concrete and make the anchor bolts carrier is level with the floor.

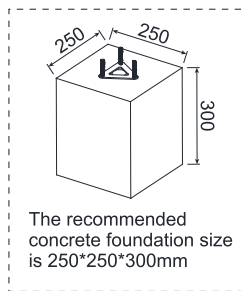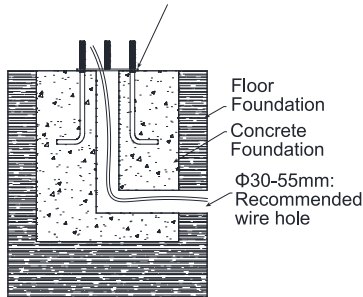


Installation of Mounting Base and Terminal Fixing Bracket: Unscrew the screws to remove the wire terminal fixing bracket from the bollard housing, secure the mounting base to the anchor bolt using nuts. Then, secure the terminal fixing bracket with screws and connect the wire according to the labels.

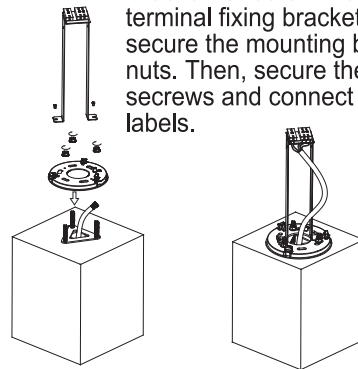

3

4



Installation Completed.

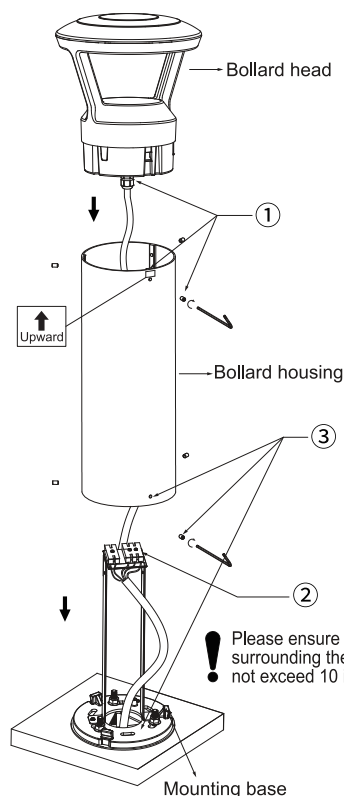

Bollard Head and Bollard Housing Installation:

- ① Install the bollard head into the bollard housing and secure with hexagon socket headless screws.
- ② Unscrew the screws to remove the wire terminal fixing bracket, connect the wire from the bollard head according to the labels.
- ③ Install the bollard housing into the mounting base and secure with hexagon socket headless screws.

! Please ensure that the water depth surrounding the bollard housing does not exceed 10 inches

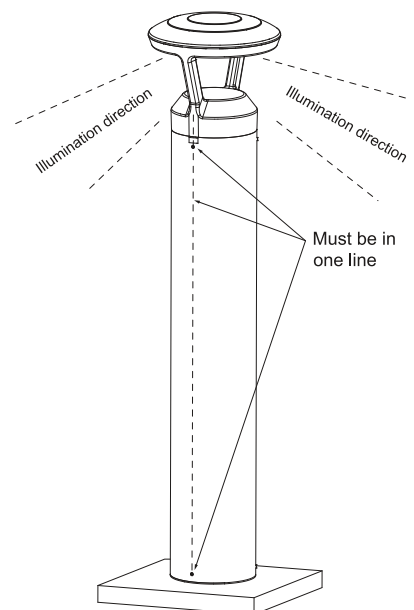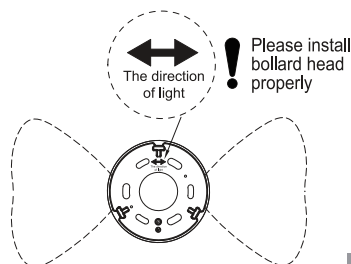

5

6