
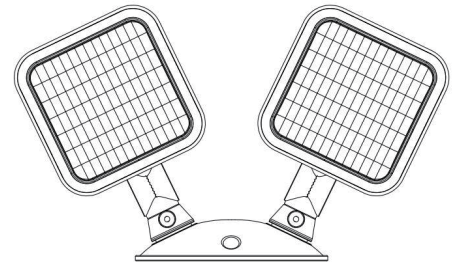


# INSTALLATION GUIDE

## *OUTDOOR REMOTE* HEADS EMERGENCY LIGHT

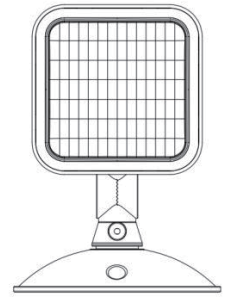

### **RISK OF ELECTRICAL SHOCK**

- Never connect, disconnect, or service the equipment while it is energized.
- Always disconnect AC power before installation or servicing.
- All electrical connections must comply with local and National Electric Code (N.E.C.) standards.
- If you are unfamiliar with proper electrical wiring, consult a qualified electrician.

### **RISK OF FIRE**

- Keep combustible materials away from the fixture.
- Follow all lamp manufacturer warnings, recommendations, and maintenance instructions.
- Ensure lamps are correctly installed before operation.

### **CAUTION**

- This product requires power from a remote capable emergency fixture.
- The unit does not contain an internal battery.
- Do not connect directly to mains voltage (120–277VAC).
- Ensure the power source provides 3.6–15VAC.

\*Pictures and diagrams in this IM are for illustrative purpose only.

# OUTDOOR REMOTE HEADS EMERGENCY LIGHT

## IMPORTANT SAFEGUARDS

When using electrical equipment, always follow basic safety precautions.

- Suitable for outdoor and wet location use.
- Operating temperature range: 32°F to 104°F (0°C to 40°C).
- Consult local building codes before installation.
- Install only in the intended application.
- Do not use accessories that are not recommended by the manufacturer.
- Unauthorized accessories may void the warranty and create unsafe conditions.
- Only qualified personnel should service this equipment.
- Install the fixture in locations where it cannot be tampered with by unauthorized personnel.
- Ensure all wire connections are secure and properly placed inside the wiring channels.



## IMPORTANT CODE COMPLIANCE INFORMATION:

According to NFPA 101 Life Safety Code:

- Emergency lighting must be tested monthly for at least 30 seconds.
- Emergency lighting must be tested annually for 90 minutes.
- Maintain written records of all testing for inspection by local authorities.
- Refer to local building codes for additional compliance requirements.

## INSTALLATION INSTRUCTIONS

1. Feed the wires through the opening at the bottom of the fixture.
2. Route the wires to the remote capable of an emergency fixture.
3. Ensure the primary fixture provides 3.6-15VAC output.
4. Follow the wiring guidelines provided by the primary emergency fixture.
5. Mount the remote head securely to the wall or ceiling using screws.

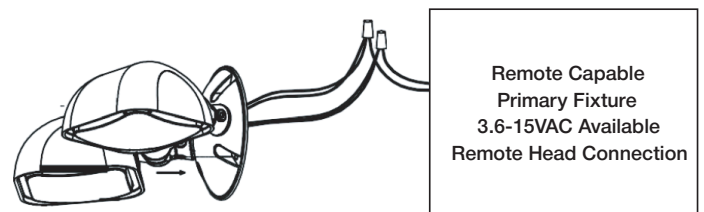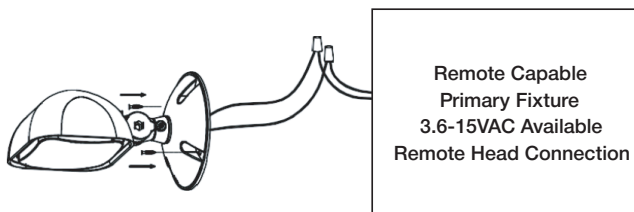

\*Pictures and diagrams in this IM are for illustrative purpose only.

## INSTALLATION FOR OUTDOOR REMOTE HEADS EMERGENCY LIGHT

---

### OPERATION (BATTERY BACKUP)

1. Press the TEST switch on the primary remote capable of an emergency fixture.
2. The remote head should illuminate during the test.
3. Release the TEST switch to turn the emergency lights off.

### MAINTENANCE

#### CAUTION

- Use only manufacturer-supplied or approved replacement parts.
- Clean the lens periodically to maintain proper illumination.
- Replace lamps if necessary.
- Perform required NFPA 101 testing procedures.

#### Required testing schedule:

- Test every 30 days for at least 30 seconds.
- Perform a full 90-minute test annually.
- Maintain written records for inspection by authorities.

\*Pictures and diagrams in this IM are for illustrative purpose only.