


INSTALLATION GUIDE

SWITCHABLE EMERGENCY EXIT SIGN

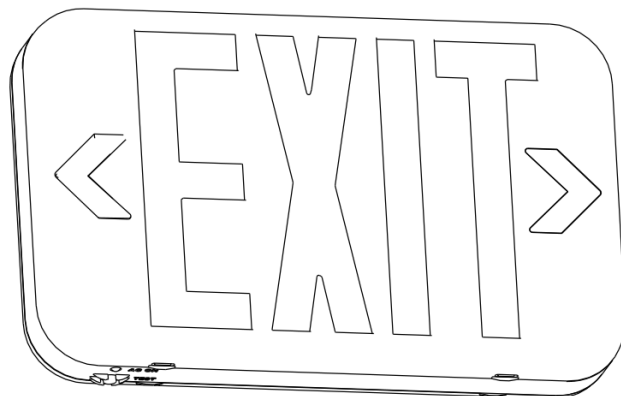

RISK OF ELECTRICAL SHOCK

- Never connect, disconnect, or service the equipment while it is energized.
- Always disconnect AC power before installation or servicing.
- All electrical connections must comply with local and National Electric Code (N.E.C.) standards.
- If you are unfamiliar with proper electrical wiring, consult a qualified electrician.

RISK OF FIRE

- Keep combustible materials away from the fixture.
- Follow all lamp manufacturer warnings, recommendations, and maintenance instructions.
- Ensure lamps are correctly installed before operation.

CAUTION

- The internal battery may not be fully charged when first installed.
- Allow the battery to charge for at least 24 hours after connecting power before normal operation.

IMPORTANT SAFEGUARDS

When using electrical equipment, follow these safety precautions:

- Suitable for indoor damp locations only. Do not use outdoors.
- Operating temperature range: 32°F to 104°F (0°C to 40°C).
- Do not mount near gas or electric heaters.
- Use the product only for its intended purpose.
- Accessories not recommended by the manufacturer may cause unsafe conditions.
- Mount the equipment in locations where unauthorized personnel cannot tamper with it.
- Use caution when handling batteries.
- Cap all unused wires using the provided wire nuts or an approved method.
- Ensure wire connections are secure and wires are tucked into proper channels.

*Pictures and diagrams in this IM are for illustrative purpose only.

SWITCHABLE EMERGENCY EXIT SIGN

CODE COMPLIANCE INFORMATION

Emergency lighting systems must be tested regularly according to NFPA 101 Life Safety Code.

- Test the system monthly for at least 30 seconds.
- Test the system annually for 90 minutes.
- Follow any additional requirements specified by local codes.


INSTALLATION INSTRUCTIONS

BACK MOUNT INSTALLATION

1. Remove the EXIT stencil faceplate from the housing.
2. Drill or remove the appropriate knockouts on the back plate for junction box mounting.
3. Remove the center knockout for supply wiring.
4. Route the input wires through the center hole of the back plate.
5. Connect the wiring according to the wiring diagram.
6. Push wire connections into the junction box.
7. Secure the mounting plate to the junction box (hardware not included).
8. Attach the back plate to the steel mounting plate.
9. Toggle the switch to select GREEN illumination, if applicable.
10. Connect the battery.
11. Remove the arrow knockouts on the faceplate as required.
12. Insert the RED or GREEN diffuser into the faceplate.
13. Reattach the EXIT stencil faceplate to the housing.
14. Apply AC power. The LED indicator will turn RED.
15. Press the TEST button to verify operation.

WIRING DIAGRAMS


GENERAL WIRING DIAGRAM

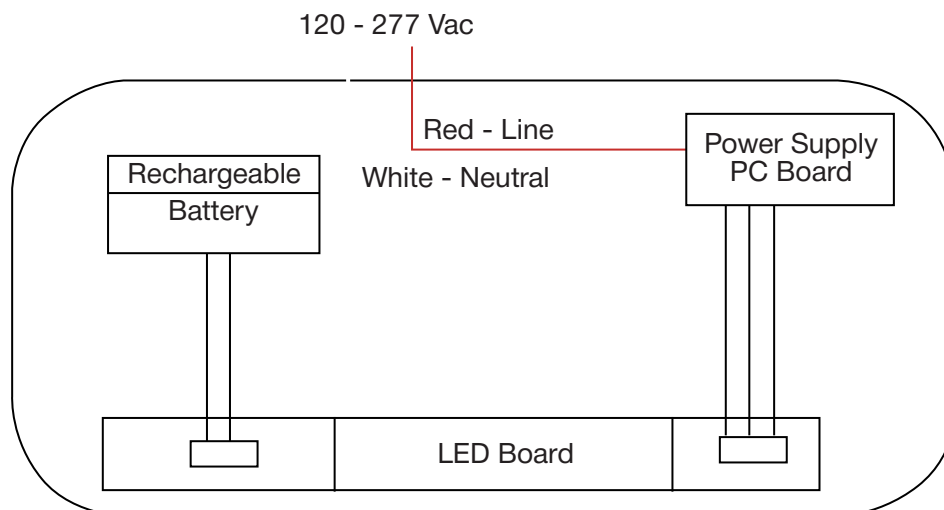

*Pictures and diagrams in this IM are for illustrative purpose only.

INSTALLATION FOR **SWITCHABLE EMERGENCY EXIT SIGN**

MOUNTING DIAGRAM

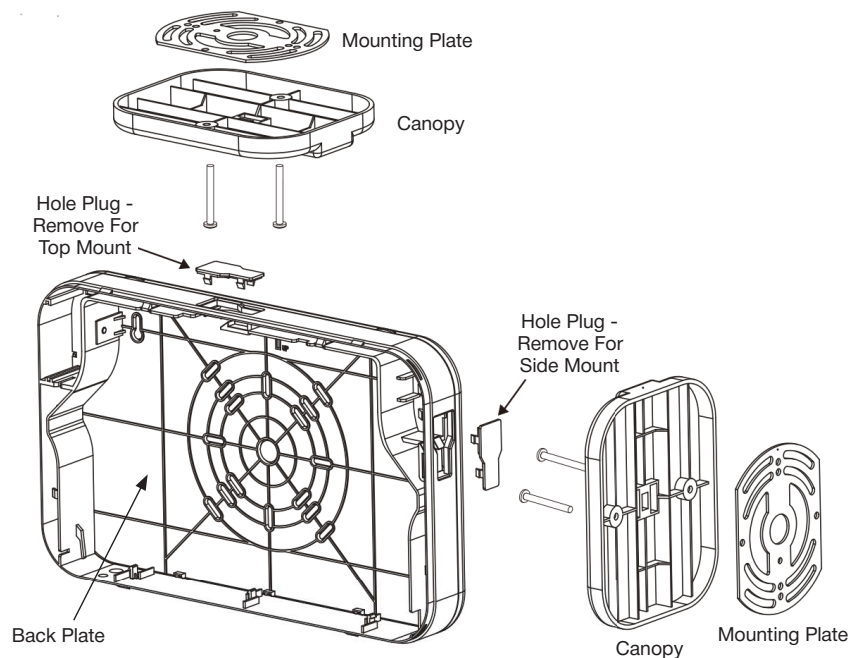

TOP OR SIDE MOUNT INSTALLATION

1. Remove the EXIT stencil faceplate from the housing.
2. Remove the RED lens from the faceplate and set aside.
3. Insert the provided screws into the canopy mounting holes.
4. Remove the mounting hole plug from the top or side of the housing, depending on installation type.
5. Insert the canopy tab into the mounting hole.
6. Slide the canopy until it locks securely into place.
7. Route the input wires through the canopy and mounting plate.
8. Connect the wiring according to the wiring diagram.
9. Push wire connections into the junction box.
10. Secure the mounting plate to the junction box.
11. Attach the canopy to the mounting plate using the screws.
12. Toggle the switch to select GREEN illumination, if applicable.
13. Connect the battery.
14. Remove the required arrow knockouts on the faceplate.
15. Reinstall the RED or GREEN diffuser and reattach the faceplate.
16. For double-sided signs, replace the back plate with a second faceplate.
17. Apply AC power. The LED indicator will turn RED.
18. Press the TEST button to confirm operation.

*Pictures and diagrams in this IM are for illustrative purpose only.

SWITCHABLE EMERGENCY EXIT SIGN

OPERATION (BATTERY BACKUP)

1. Apply AC power to the unit. The LED indicator will glow RED.
2. Allow the battery to charge for 24 hours before testing.
3. Press the TEST button to simulate power failure.
4. The LED indicator will turn OFF while the EXIT sign remains illuminated.
5. Release the TEST button to return to normal operation.

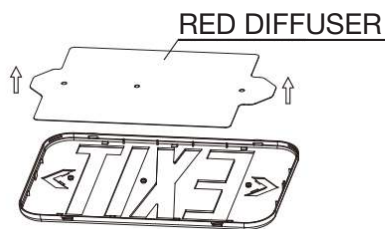


Figure A

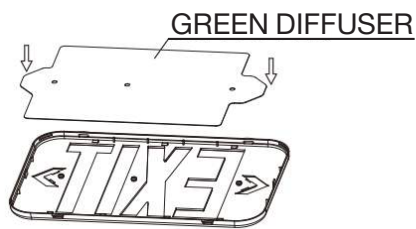


Figure B

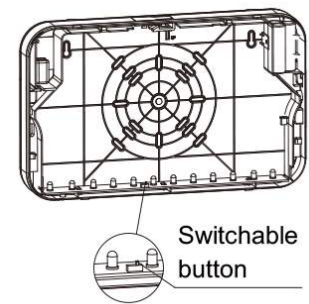


Figure C

MAINTENANCE

CAUTION:

- Always turn off the AC power to the equipment before servicing. Use only MANUFACTURER-supplied replacement parts.

BATTERY:

- It should be tested periodically and replaced when it no longer operates the connected sign for the duration of a 30-second or 90-minute test.

*Pictures and diagrams in this IM are for illustrative purpose only.