


INSTALLATION INSTRUCTION

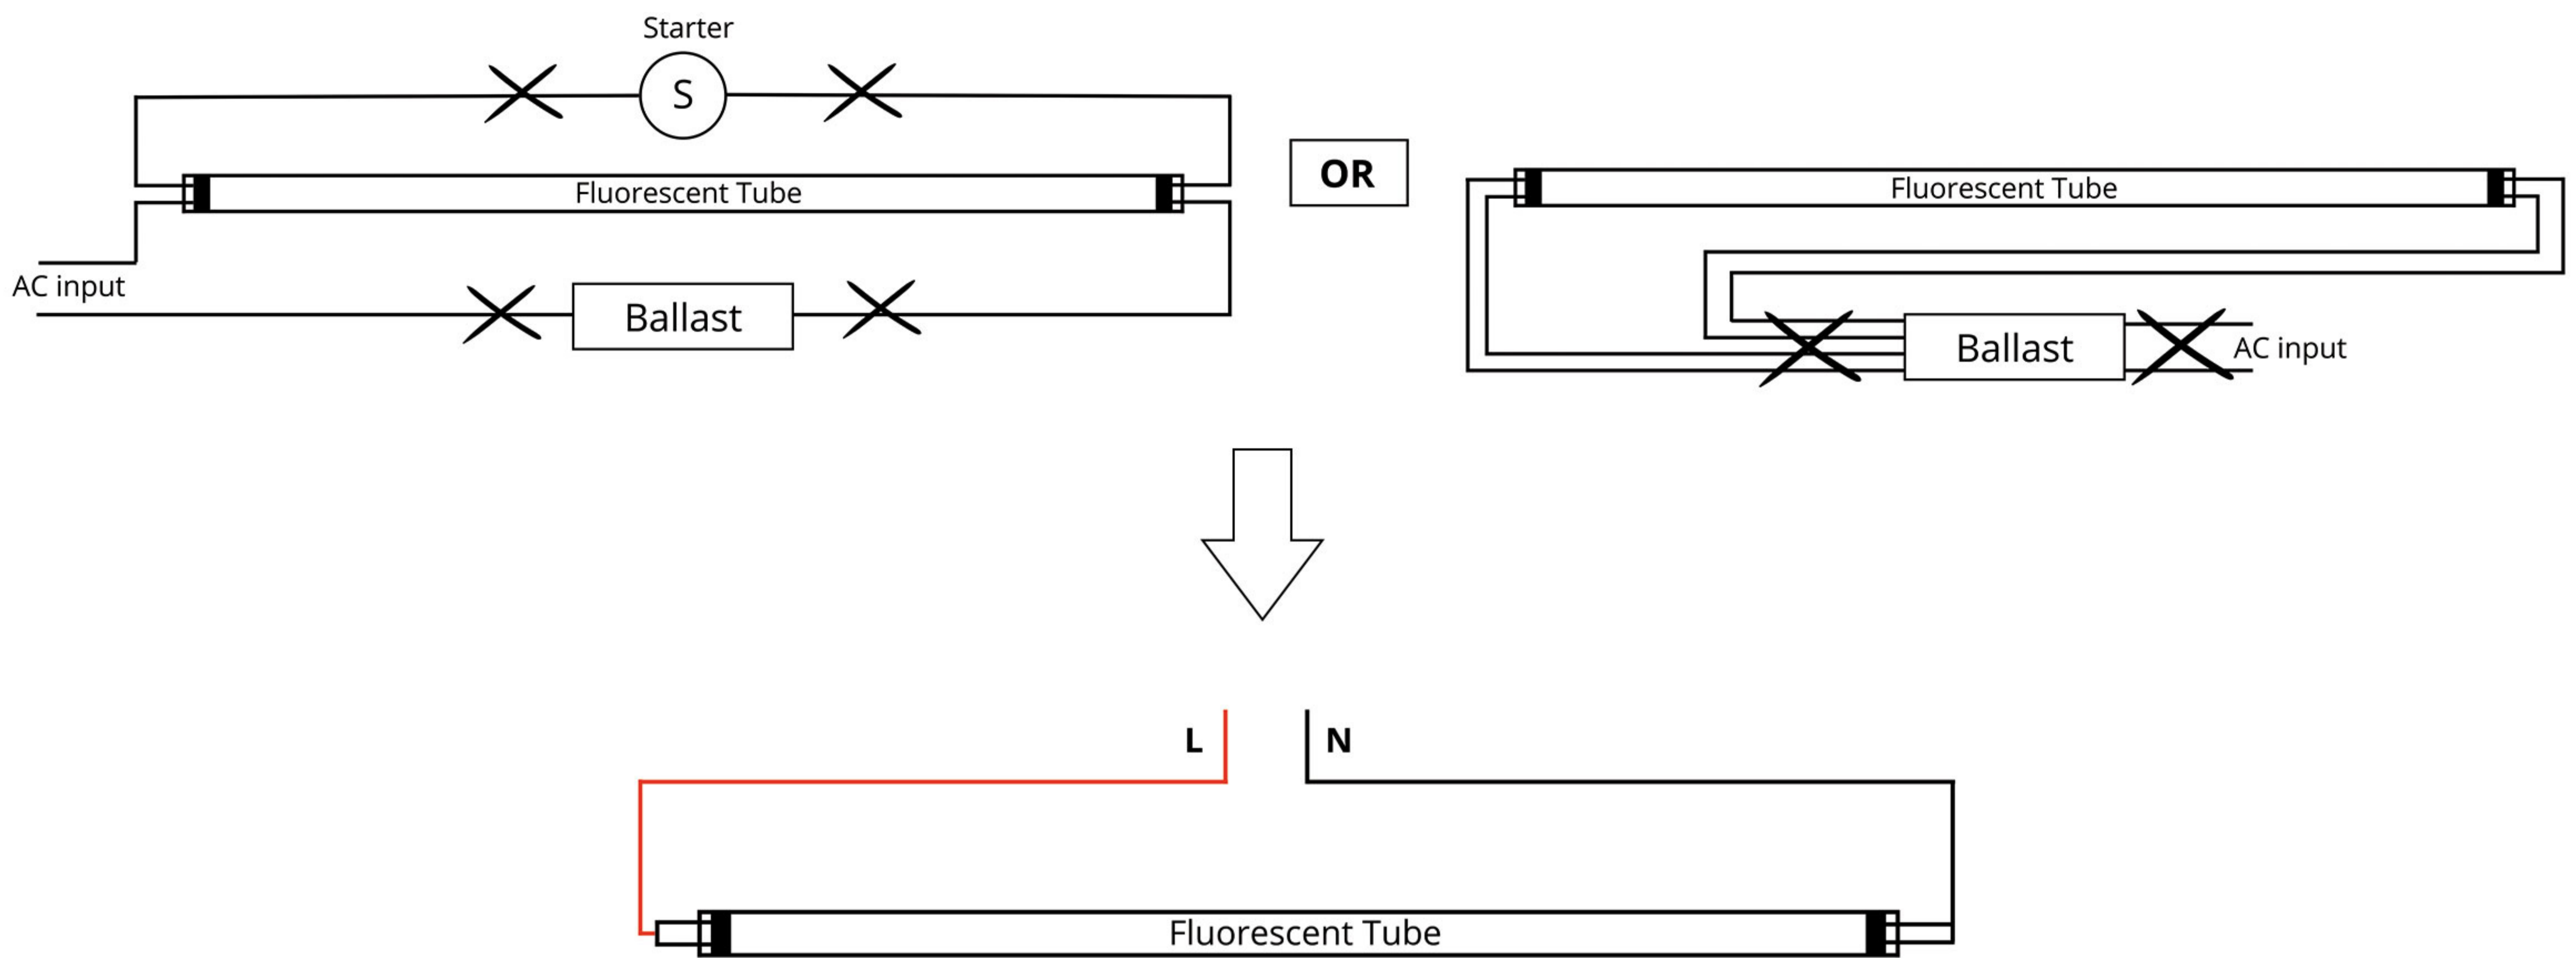

Note: BE - Both Ends (power applied to both ends of the lamp simultaneously)
 OE - One End (power applied to one end only, other end not connected)

LED RETROFIT KIT INSTALLATION GUIDELINE

Step 1- Disconnect all power to the lamp fixture.

Step 2- Take off the fluorescent lamp.

Step 3- Designate one of the fixtures lamp sockets as the 'LIVE END' and other end as 'NEUTRAL END' and mark for future reference.

Step 4- Connect the positive lead to one of the lamp pin base and connect the negative lead to the second of the lamp pin base.

Step 5- Install LED tube light in the fixture matching the Line and Neutral side of the fixture. After having fixed it, turn the tube 90 degree, ensure that the tube is well installed to the lamp fixture.

Step 6- After modification completes, then affix the lamping replacement marking label and cautionary label to painted surface and bare aluminum, located this where visible during re-lamping on the retrofitted luminaire.